


# Xelatec XIPPR System Single Site - Typical Block Diagram

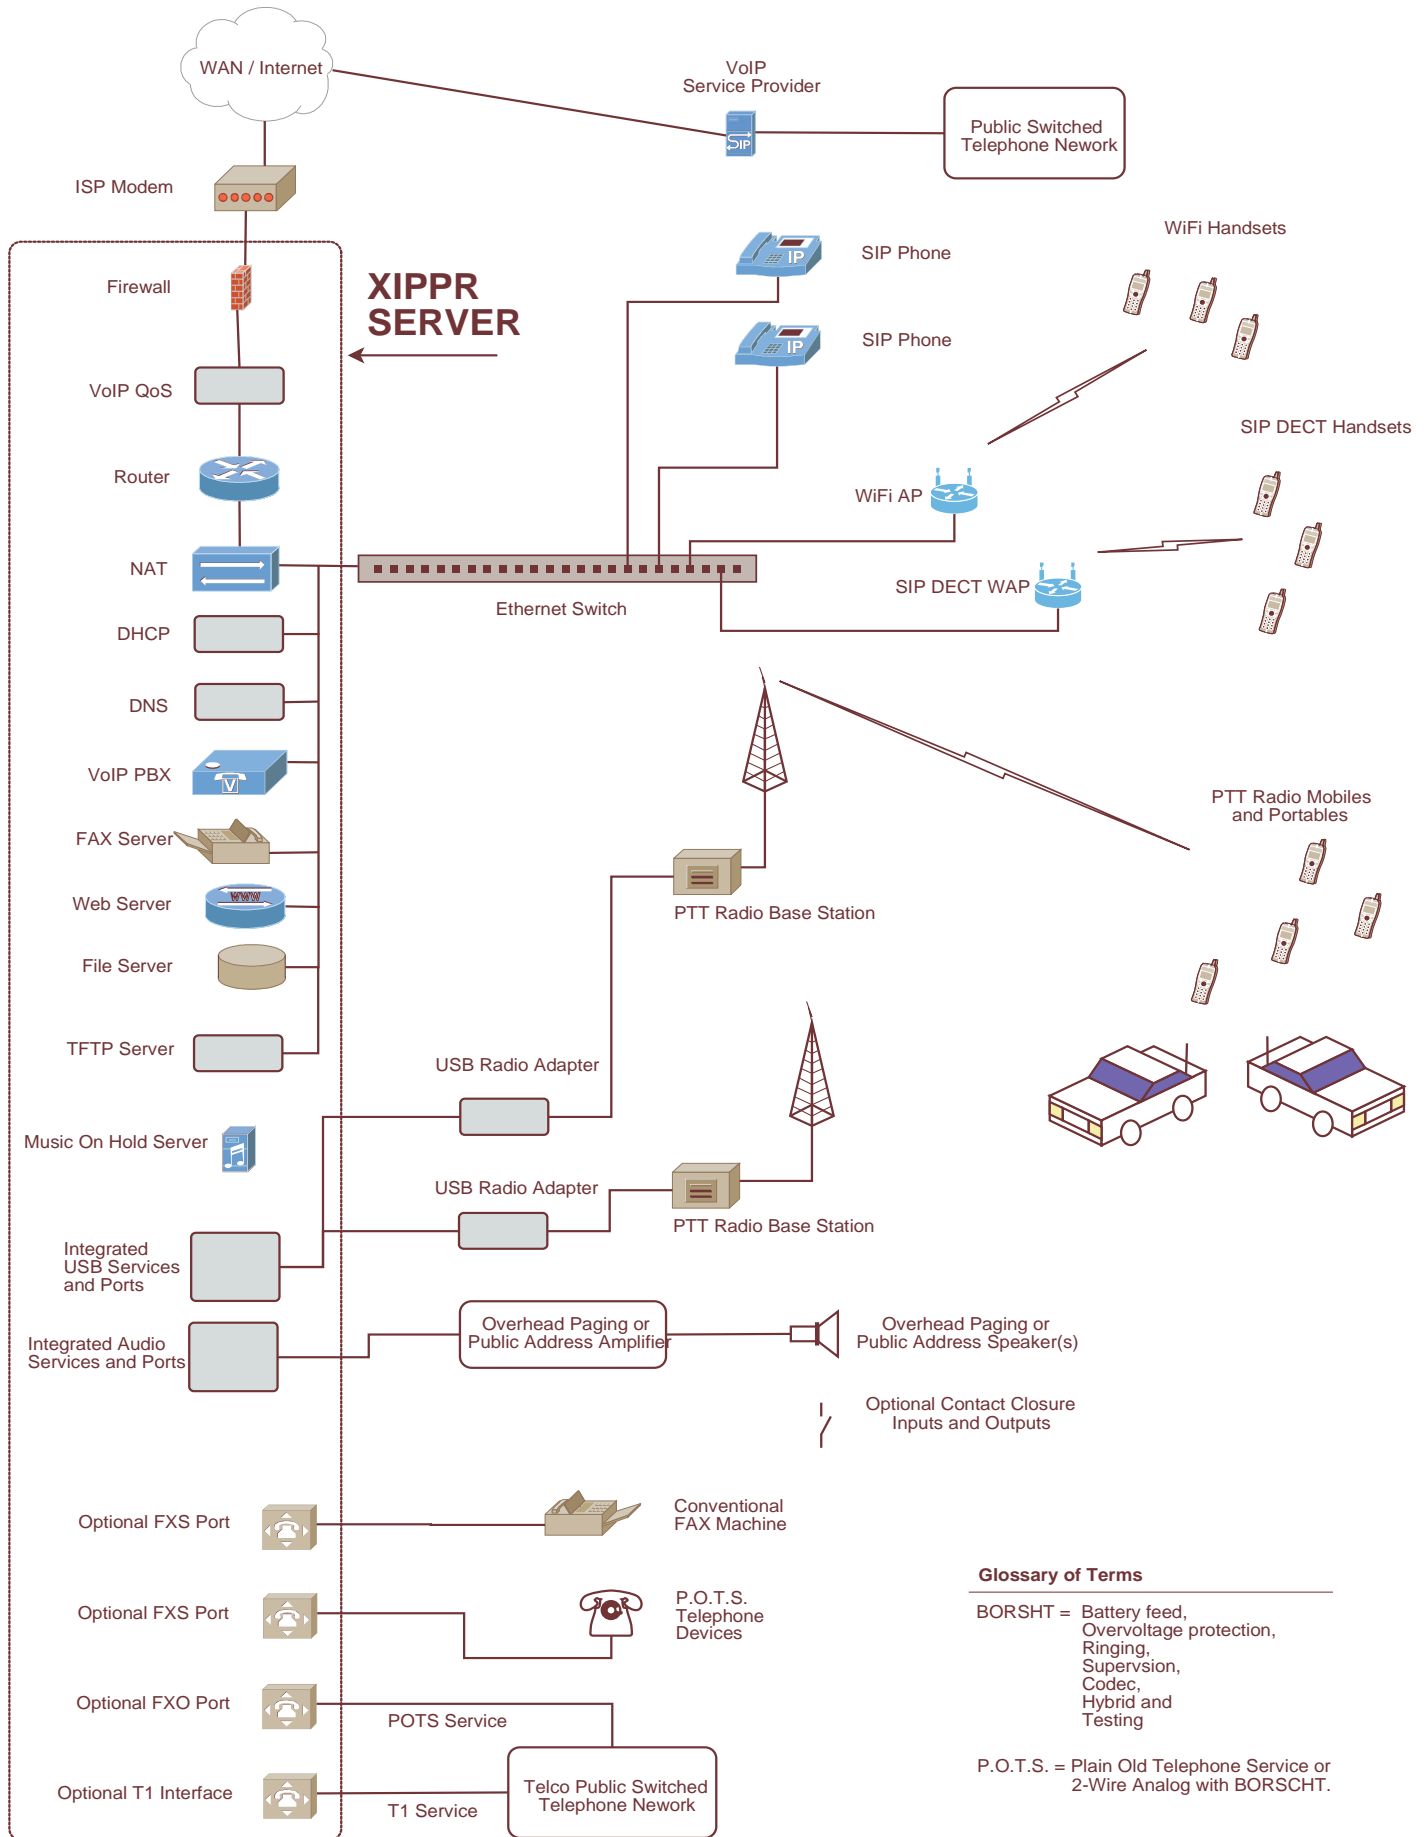

## Glossary of Terms

BORSHT = Battery feed, Overvoltage protection, Ringing, Supervision, Codec, Hybrid and Testing

P.O.T.S. = Plain Old Telephone Service or 2-Wire Analog with BORSCHT.